





**PORTABLE VIBRATION METER VIB-15.**

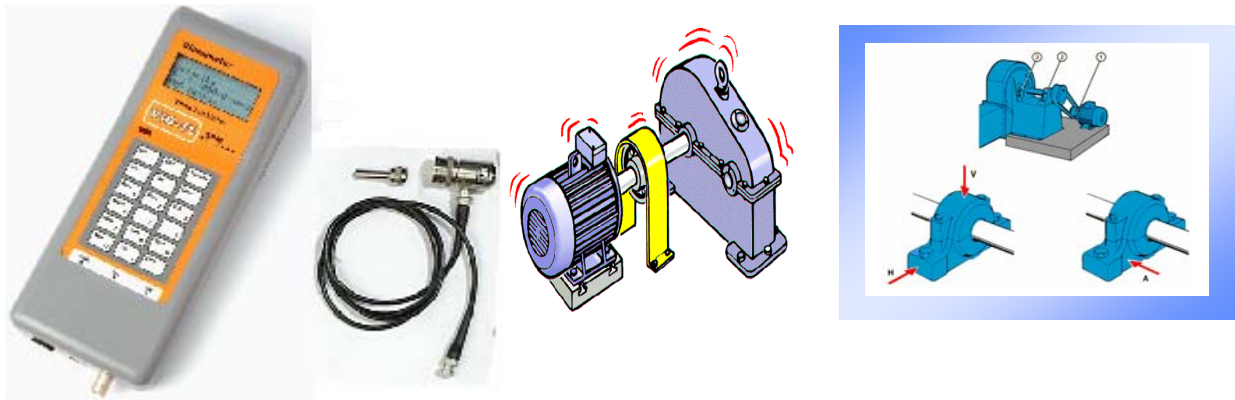

- **True Value Vibration - LCD Display.** Instrument for Field Use. Sealed Membrane Keypad. Size- 255 x 105 x 60 mm. Power - 6 x 1.5 V Cells. **Weight - less than 1 kg.**
- **Vibration Monitoring – Acceleration, Displacement & Velocity**

Limits	Class II	Class III	Class IV	Class V	mm/s RMS
28	Red	Red	Red	Red	20
18	Red	Red	Red	Yellow	10
11	Red	Red	Yellow	Green	5
7,1	Yellow	Yellow	Green	Green	2
4,5	Yellow	Green	Green	Green	1
2,8	Green	Green	Green	Green	
1,8	Green	Green	Green	Green	
1,1	Green	Green	Green	Green	

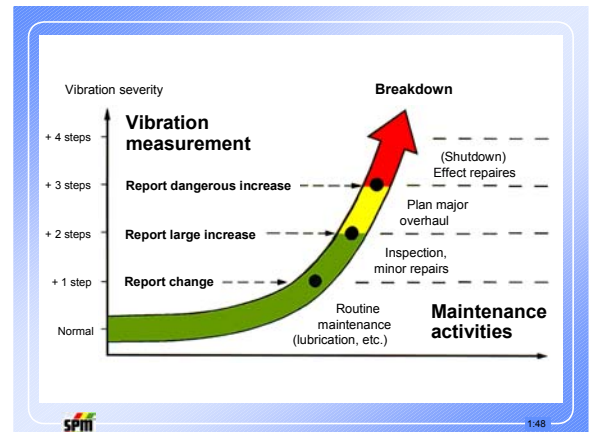

**Measurement – As per ISO Standards. Peak, RMS and Peak to Peak.** Modes available for **Fast or Normal or Slow options.**

*PARAMETERS : RANGE RESOLUTION.*

Displacement : 10 to 1000 Micron 1 Micron.  
 Velocity : 0.2 to 99.9 mm/sec 0.1 mm/sec.  
 Acceleration : 0.1 to 20 g. 0.01 g.

- **Transient Shock Force – Level of Peak value over RMS shown through Crest Factor.** Indicate transients in the Vibration Signal (Bearing and/or Gear Wear, Cavitation etc).

**Contact :- SPM Instrument India Pvt. Ltd.** 219, Shiv Centre, Sec -17, Vashi, Navi Mumbai – 400703. Phone : 022-27880654 and 9323275161/075, Telefax : 022-27880614. Emails – [mumbai@spm.co.in](mailto:mumbai@spm.co.in),. Head Office at Hyderabad, Email: [sales@spm.co.in](mailto:sales@spm.co.in)

